



Pipe & Drape Cart Assembly Instructions




Step 1



Attach casters and brakes to Cart Upright Assemblies. Locate appropriate Upright Support and ready for attachment.

Step 2

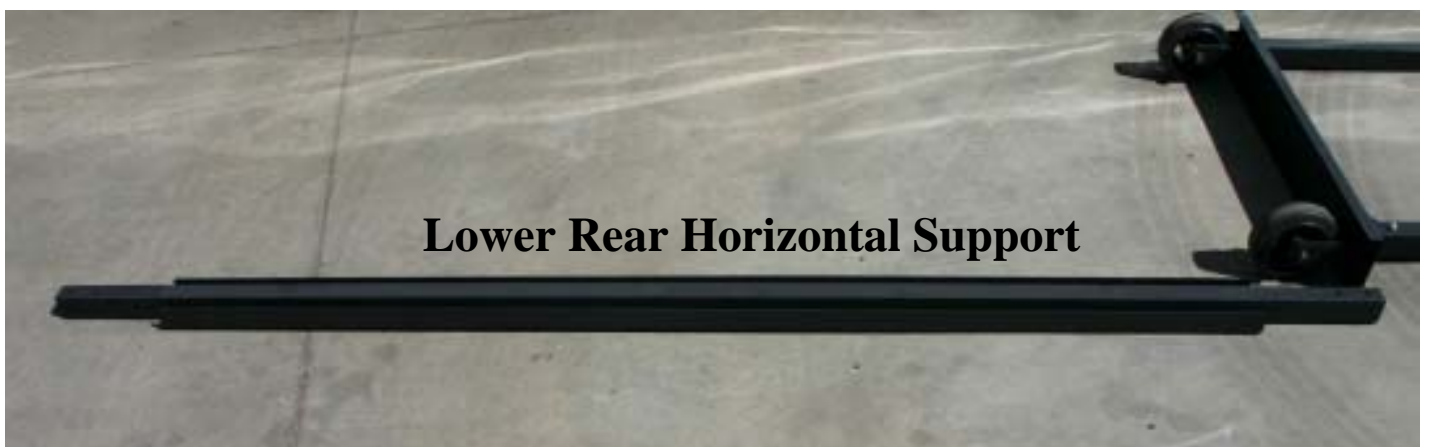

Layout Lower Rear Horizontal Support and ready for attachment.

Step 3




Using Provided 5/16" Bolts, bolt together supports as laid out.



Step 3 (continued)

Attach Drape Support Brackets (Right Shown Below) to top of frame.

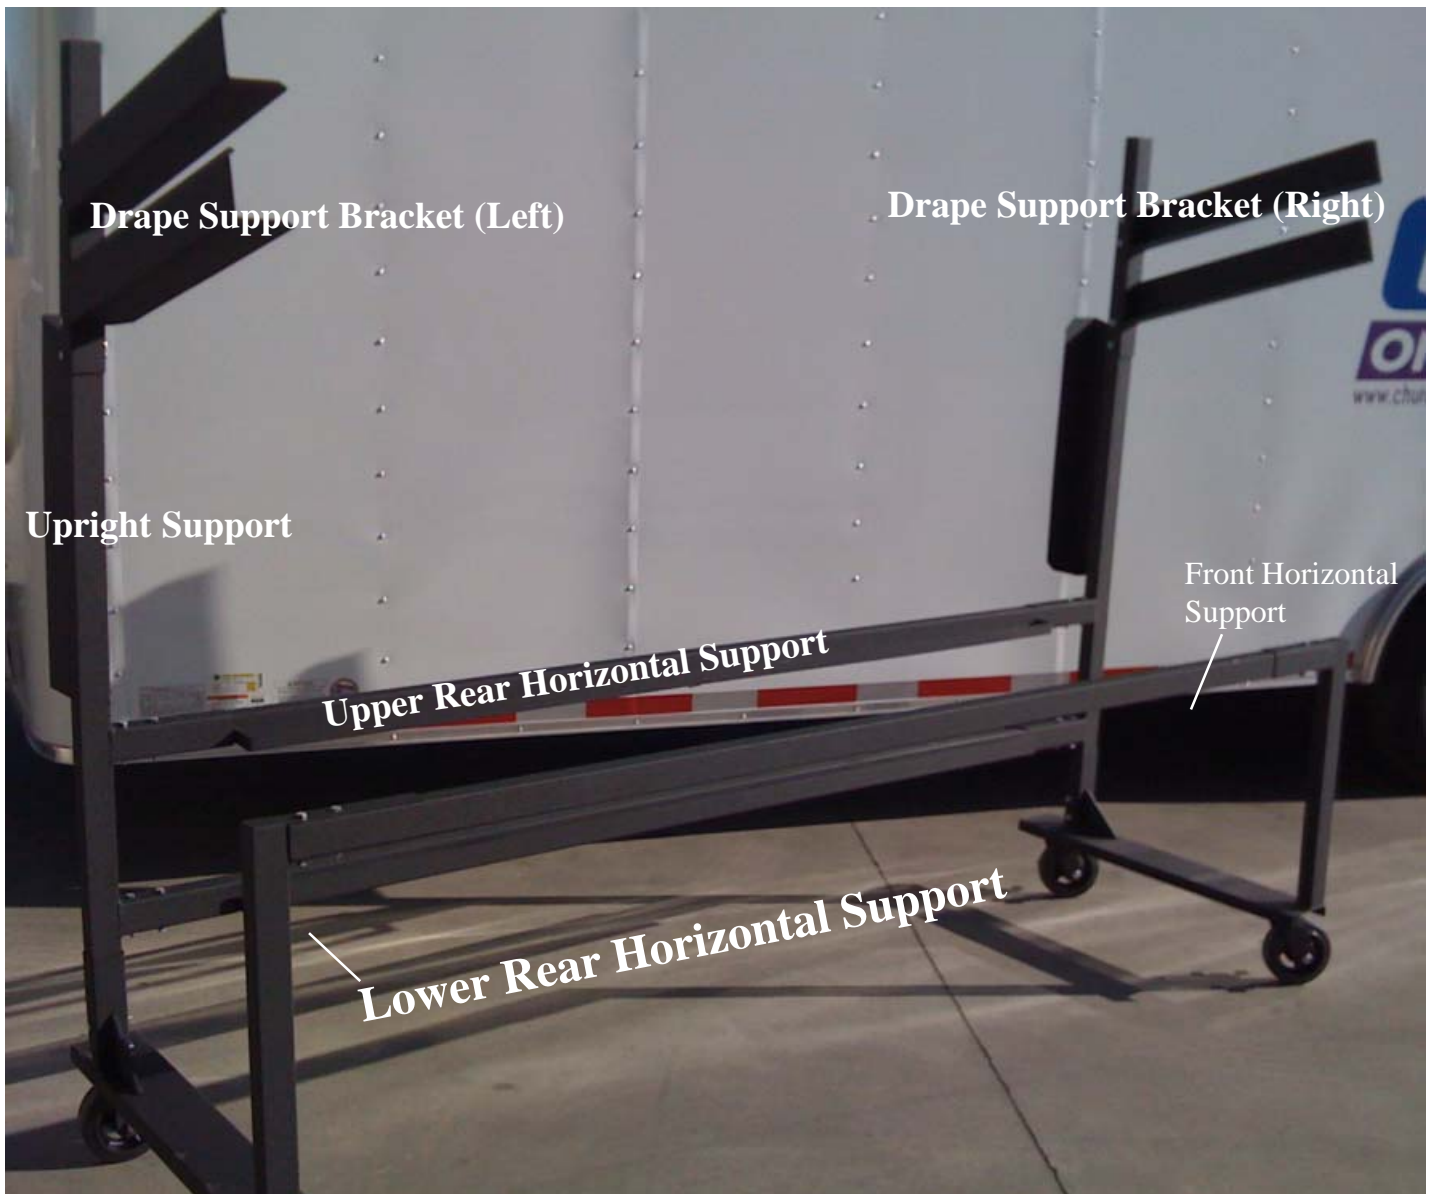

Step 3 (continued)



Step 4



Layout Nylon Drape Bag inside lower opening in assembled frame. Attach 5/16" Button head bolts in appropriate predrilled and tapped holes. (Note: there may be more gussets in bag than holes in frame.)



Step 4 (continued)



After lower part of Drape Bag is secured, attach top part of bag to top rear of the cart using the predrilled and tapped holes.

Step 5

Tighten all bolts and begin loading you cart



Load Drape Supports, by alternating levels as you load

Load uprights in rear pocket, horizontally.



Load bases as shown. If you are intending to load over 11 bases, start by loading inner side of base rack.



Thank you for your purchase!